


PARTS LIST FOR G220R-A1

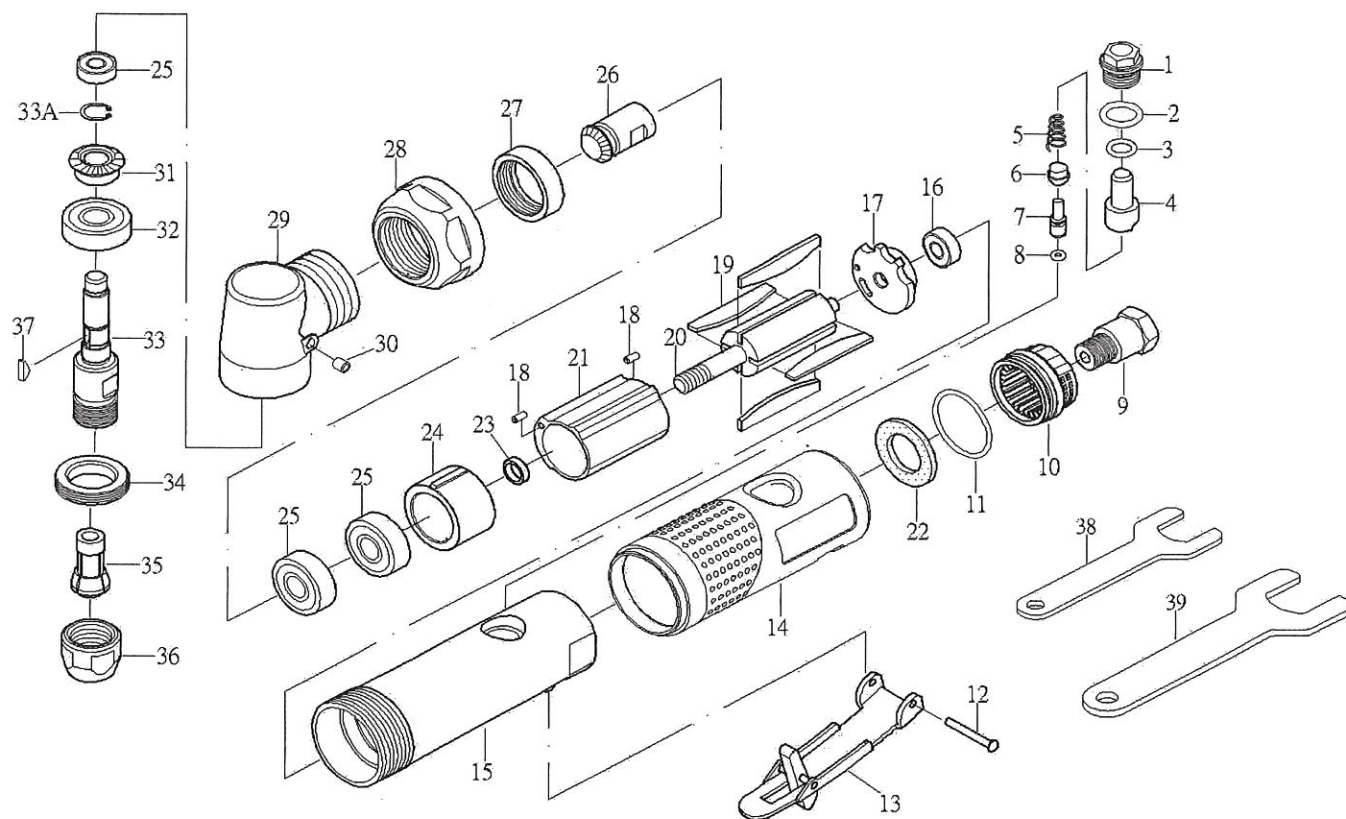

ITEM NO.	PART NO.	DESCRIPTION
01	351-0184	SCREW
02	351-0185	O-RING(P12)
03	351-0186	O-RING(P8)
04	351-0187	AIR REGULATOR
05	351-0188	SPRING
06	351-0189	VALVE STEM BUSHING
07	351-0190	VALVE STEM
08	351-0191	O-RING(3.5*1.4)
09	351-0192	AIR INLET
10	351-0612	EXHAUST SLEEVE
11	351-0194	O-RING(26.7*1.78)
12	351-0195	SPRING PIN
13	351-0196	LEVER
14	351-0197	PROTECTING RUBBER
15	351-0198	HOUSING
16	351-0199	BEARING(696ZZ)
17	351-0200	REAR PLATE
18	351-0201	PIN
19	351-0202	ROTOR BLADE
20	351-0203	ROTOR

ITEM NO.	PART NO.	DESCRIPTION
21	351-0204	CYLINDER
22	351-0205	CONE MUFFLER
23	351-0206	BEARING SPACER
24	351-0207	FRONT PLATE
25	351-0208	BEARING(608ZZ)
26	351-0296	BEVEL GEAR(18T)
27	351-0218	NUT
28	351-0219	CLAMP NUT
29	351-0220	ANGLE HOUSING
30	351-0221	OIL CUP
31	351-0222	BEVEL GEAR(20T)
32	351-0223	BEARING(6000ZZ)
33	351-0224	SHAFT
33A	351-0225	SNAP RING
34	351-0226	CLAMP NUT
35	351-0212	COLLET
36	351-0213	COLLET NUT
37	351-0227	KEY
38	351-0214	STOP SPANNER 14M/M
39	351-0215	STOP SPANNER 19M/M