


PARTS LIST FOR PS008E-A1

PS008E - A1

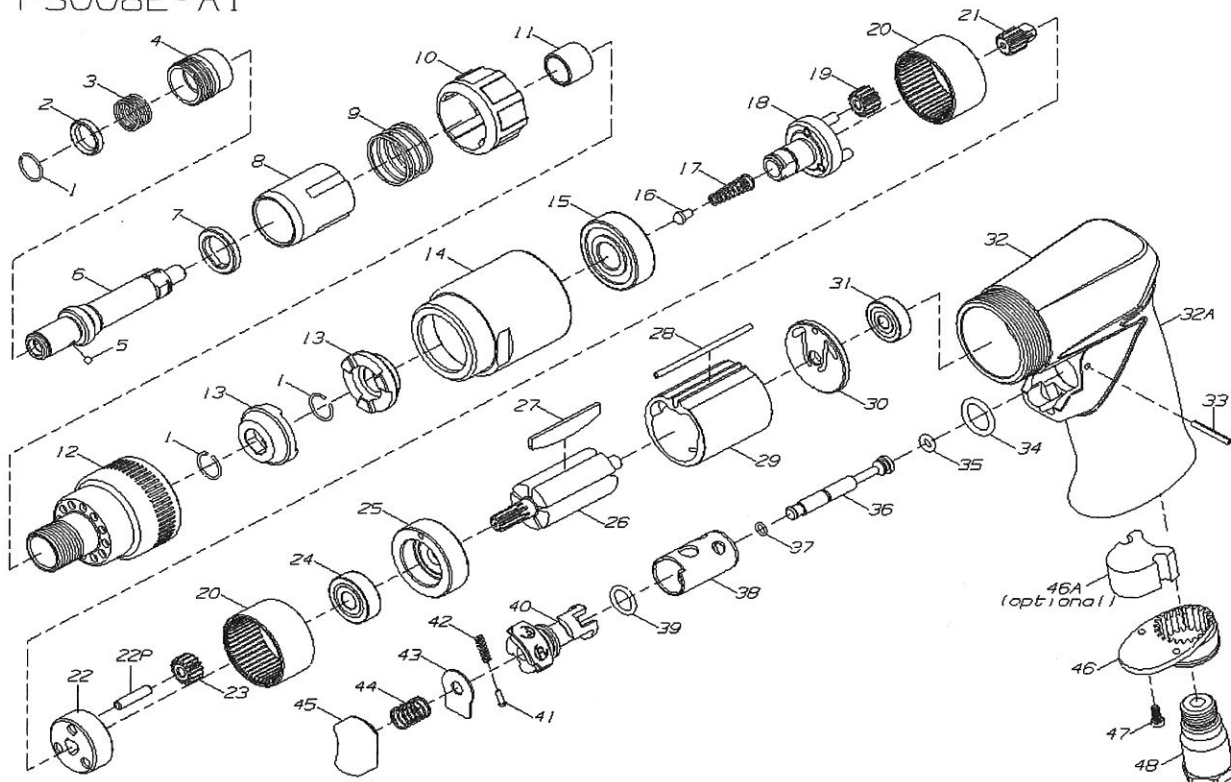

ITEM NO.	PART NO.	DESCRIPTION
1	351-0991	Retaining Ring
2	351-0992	Washer
3	351-0993	Spring
4	351-0994	Ball Releaser
5	351-1097	Steel Ball
6	351-1106	Output Spindle
7	351-1107	Bushing
8	351-1108	Adjusting Nut
9	351-1109	Spring
10	351-1110	Valve
11	351-1111	Ball Releaser
12	351-1112	Lock Cover
13	351-1113	Clutch Carrier
14	351-1114	Clutch Housing
15	351-1007	Ball Bearing
16	351-1009	Spring Guide
17	351-1010	Spring
18	351-1115	Carrier
19	351-1116	Planet Gear
20	351-1100	Internal Gear
21	351-1117	Gear Spindle
22	351-1118	Carrier
22P	351-1119	Pin
23	351-1120	Planet Gear
24	351-1013	Ball Bearing
25	351-1102	Front End Plate

ITEM NO.	PART NO.	DESCRIPTION
26	351-1103	Rotor
27	351-1104	Rotor Blade
28	351-1105	Pin
29	351-0630	Cylinder
30	351-0626	Rear End Plate
31	351-0624	Ball Bearing
32	351-0632	Motor Housing
32A	1230N-0234701-2	Housing Sleeve
33	351-0645	Pin
34	351-0644	O-Ring
35	351-0640	O-Ring
36	351-0638	Throttle Valve
37	351-0639	O-Ring
38	351-0643	Reverse Valve Bushing
39	351-1019	O-Ring
40	351-0641	Reverse Button
41	351-0990	Valve Cap
42	351-0989	Spring
43	351-0988	Trigger Plate
44	351-0637	Spring
45	351-1092	Trigger
46	351-0646	Exhaust Deflector
46A	351-1093	Muffler (Option)
47	351-0647	Screw
48	351-0648	Inter Bushing