


PARTS LIST FOR PS018A-A1

PS018A-A1

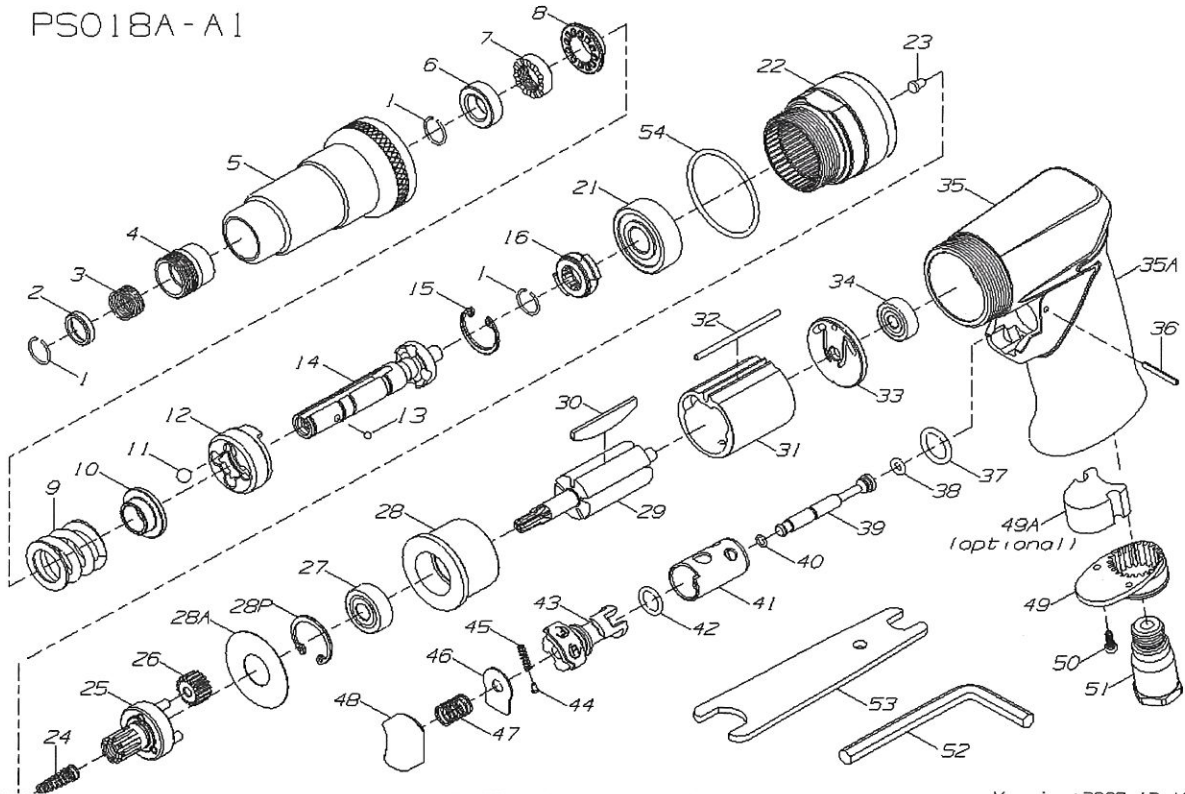

ITEM NO.	PART NO.	DESCRIPTION
1	351-0991	Retaining Ring
2	351-0992	Washer
3	351-0993	Spring
4	351-0994	Ball Releaser
5	351-0995	Clutch Housing
6	351-0996	Sleeve Bearing
7	351-0997	Adjusting Nut
8	351-0998	Washer
9	351-0999	Spring
10	351-1000	Ball Seat
11	351-1001	Steel Ball
12	351-1002	Clutch Carrier
13	351-1003	Steel Ball
14	351-1004	Cam Spindle
15	351-1005	Retaining Ring
16	351-1006	Drive Dog
21	351-1007	Ball Bearing
22	351-1008	Gear Housing
23	351-1009	Spring Guide
24	351-1010	Spring
25	351-1011	Carrier
26	351-1012	Planet Gear
27	351-1013	Ball Bearing
28	351-1014	Front End Plate
28A	351-1015	Washer
28P	351-1016	Retaining Ring
29	351-1017	Rotor

ITEM NO.	PART NO.	DESCRIPTION
30	351-0628	Rotor Blade
31	351-0630	Cylinder
32	351-1018	Motor Pin
33	351-0626	Rear End Plate
34	351-0624	Ball Bearing
35	351-0632	Motor Housing
35A	1230N-0234701-2	Housing Sleeve
36	351-0645	Pin
37	351-0644	O-Ring
38	351-0640	O-Ring
39	351-0638	Throttle Valve
40	351-0639	O-Ring
41	351-0643	Reverse Valve Bushing
42	351-1019	O-Ring
43	351-0641	Reverse Valve
44	351-0990	Valve Cap
45	351-0989	Spring
46	351-0988	Trigger Plate
47	351-0637	Spring
48	351-1092	Trigger
49	351-0646	Exhaust Deflector
49A	351-1093	Muffler (Option)
50	351-0647	Screw
51	351-0648	Inter Bushing
52	351-1020	Hex Wrench
53	351-1021	Wrench
54	351-1022	O-Ring